

Checklist

 Batch work and plan ahead, having items available outside each patient room. If you already have a mask on: Sanitize hands. Remove mask. Store mask. Sanitize hands. 	 Slide the helmet into the hood until it snaps in the center hole. Snap helmet into the hood on the left and right side snaps of the face shield. Set the assembled PAPR hood aside.
 3 Sanitize hands. 4 Put on first pair of gloves. 5 Secure the belt around the waist. 6 Secure the battery on the left side of the belt. 7 Connect the helmet to the battery. 8 Check the LED lights to ensure the battery is fully charged. 9 Put helmet on head and size to fit by turning ratchet knob to adjust the 	 Sanitize first pair of gloves. Put on coveralls outside room. Open-end faces your front. Insert PAPR power cord connector into the battery. Put the helmet on, letting the hood drape around your shoulders over the coveralls. Zip up the front of the coveralls. Straighten the hood draping and tie it down.
 headband. Adjust fan speed to comfort. Disconnect the battery. Take off the helmet and place it inside the PAPR hood. Ensure the white HEPA filter is on top, the helmet is inside filter pouch, and the adjustable knob is outside of filter pouch. 	 21 Put on second pair of gloves. 22 Sanitize second pair of gloves. 23 ENTER room. DO NOT enter the room if you do not achieve a proper fit of the PAPR system. 24 Do not touch or re-adjust PAPR system inside the room.







Next patient: COVID+

Checklist

Inside room

- **Sanitize** outer gloves.
- 2 **Remove** outer gloves.
- 3 Sanitize inner gloves.
- 4 Exit patient room.

Outside room

- Sanitize inner gloves.
 Put on fresh outer gloves.
- 3 Walk to next patient with confirmed COVID-19 (marked) while remaining in marked zone.
- Do not touch your face, the walls, rails, or anybody else until reaching the next room.



- 6 **Enter** NEXT COVID-19 patient room or area.
- Do not touch face or re-adjust PAPR system inside room.










Next patient: NOT COVID+

Checklist

Inside room

Outside room

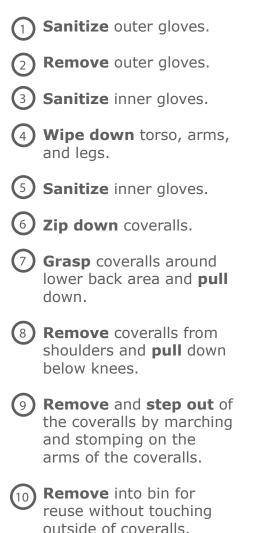


Sanitize gloves.

Exit patient room.

EMORY

 (\bigcirc) (\bigcirc) (\bigcirc) (\bigcirc) (\bigcirc)



3 Untie the PAPR hood.

4 Grasp face shield at the sides and pull out snaps.

- 5 **Pull** face shield forward and **release** helmet pin.
- G Grab hood top, pull back, then pull forward to remove hood, avoiding your face.

If reusing, place hood in designated bin.





10 Put on mask.

11 Wipe helmet.





14 Sanitize gloves.

15 Remove gloves.

16 Wash hands.

Emory University, created by Visual Medical Education. Updated August 13, 2020